

VI.3.4B-PUNCHRC PROGRAM FCINIT COMMAND PUNCHRC

Purpose

Command PUNCHRC outputs card images of Rating Curve definitions.

The output is in the form that can be used as input to command DEF-RC.

Input Data

First record:

PUNCHRC

Subcommands

First Field (abbreviation)                      Subsequent Fields (abbreviation)

One of the following subcommands must be entered:

IDENTIFIER (IDS, ID, I)                      Identifiers of Rating Curves to be punched

ALLRC    None - all Rating Curves will be punched

The following subcommand is optional. If omitted the units will be those used when the Rating Curve was defined.

UNITS (U)                                      ENGLISH (E) or METRIC (M) - if blank units will be those used when the Rating Curve was defined

Last record:

END    None

Example

The following input will punch Rating Curves definitions in English units:

```
PUNCHRC
  IDENTIFIER ROSSE BLASE
  UNITS      ENGLISH
  END
```