

Purpose

Technique PRTPP6 sets whether precipitation data is to be printed for stations that have both 6 hour sums and daily totals.

Valid values are NO (0) and YES (1).

The global default is NO (0).

This Technique is Universal.

Form of Input

PRTPP6(integer)

where integer is 0 or 1 specifying whether PRTPP6 is off or on

Examples

PRTPP6

Data will be printed for stations with 6 hour precipitation summations.

PRTPP6(0)

No data will be printed.